
# IMPULSE SUPPRESSOR INSTALLATION PLEASE READ DANGER SHEET BEFORE INSTALLING

#### A GOOD GROUND SYSTEM IS REQUIRED A-707000+XXDC LATION AND OPERATION.

The DGXZ+06NFNF-A is used as a transmit and/or receive unit with dc voltage up to 6Vdc to power up a receive only Preamp generally located near the top of the tower at the antenna. Maximum average RF power use is 300 Wrms. Connect this unit in the direction it is labeled. The dc circuit has spike protection to suppress spikes over +6.5V to the dc Power Supply. This DGXZ+06NFNF-A is capable of 20,000 Amp maximum surges and has a frequency range of 800MHz to 2.5GHz.

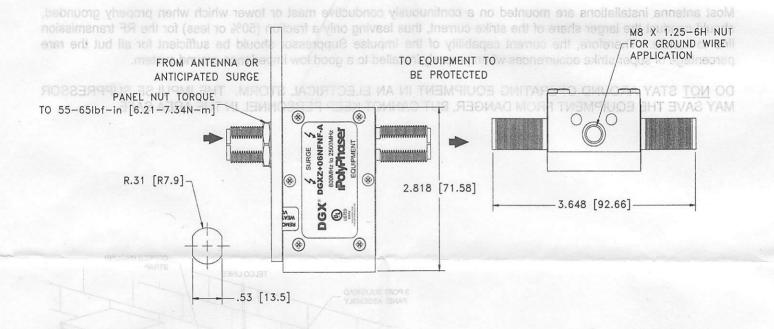

These commodities or technology are exported from the U.S. in accordance with the Export Administration Regulations. Diversion contrary to U.S. law prohibited.

IT IS VERY IMPORTANT THIS UNIT BE GROUNDED TO A LOW IMPEDANCE (LOW R AND LOW L) GROUND SYSTEM IN ORDER TO WORK PROPERLY. When attaching grounding stud (M8), use maximum of 88.5 lbf-in. [10 N-m] of torque. "N" mating connector torque is 15-20 lbf-in. [1.70-2.26 N-m]. We strongly recommend this ground be interconnected to the tower ground and power ground to form one system. To minimize the "in-air" interconnect inductance to the ground system since skin effect is present, use as straight and as large a surface area strap as possible. Keep bends to 8.0" [203.2mm] radius or larger.

The transmission line is only one means of having damaging impulse energy enter your equipment. We strongly recommend power line and telephone line protectors be used on the equipment.

#### LIMITED TEN YEAR WARRANTY

PolyPhaser Corporation warrants this product to meet or exceed the published specifications of the time of manufacturing and to be free of manufacturing defects for a ten year period after proven date of purchase. PolyPhaser Corporation makes no claims, nor extends any warranty to include an "IMPLIED WARRANTY OF MERCHANTABILITY OR IMPLIED WARRANTY OF FITNESS FOR ANY PARTICULAR PURPOSE". PolyPhaser Corporation assumes no responsibility for personal injury, property damage, and any other losses. This warranty is limited to the repair, replacement or refund of purchased price of this product only and it will be PolyPhaser Corporation as to whether this unit is defective and as to which of the above mentioned actions will be taken. PolyPhaser Corporation extends no obligation to update or modify any of its existing products as newly developed products are marketed. These commodities or technology are exported from the U.S. in accordance with the Export Administration Regulations. Diversion contrary to U.S. law prohibited.

### MONTAL LATE DANGER

## PLEASE REVIEW THIS SHEET PRIOR TO ANY INSTALLATIONS.


A GOOD GROUND SYSTEM IS REQUIRED FOR PROPER INSTALLATION AND OPERATION. THE IMPULSE SUPPRESSOR IS ONLY AS GOOD AT SUPPRESSING IMPULSES AS THE ELECTRICAL GROUND SYSTEM THAT IS CONNECTED TO THE UNIT.

DO NOT CONNECT WHEN A STORM IS NEAR. DO NOT CONNECT WHEN TRANSMISSIONS ARE OCCURRING.

50% of the time a lightning strike occurs in groups of two or three strokes with the first stroke having 20,000 amps and then less for the following strokes. Each stroke may have a rise time of  $2.1\mu s$  to the peak current and a decay between 10 to  $40\mu s$ .

Most antenna installations are mounted on a continuously conductive mast or tower which when properly grounded, should conduct the larger share of the strike current, thus leaving only a fraction (50% or less) for the RF transmission line to handle. Therefore, the current capability of the Impulse Suppressor should be sufficient for all but the rare percentage of super strike occurrences when properly installed to a good low impedance ground system.

DO <u>NOT</u> STAY AROUND OPERATING EQUIPMENT IN AN ELECTRICAL STORM. THE IMPULSE SUPPRESSOR MAY SAVE THE EQUIPMENT FROM DANGER, BUT CANNOT KEEP PERSONNEL IN THE AREA SAFE.

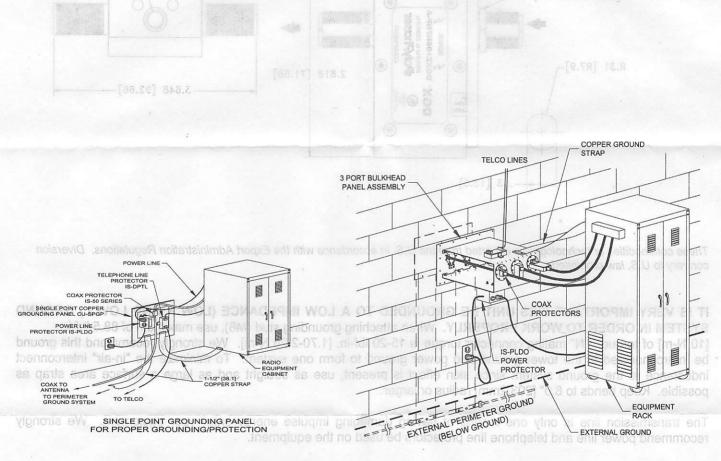

We recommend the coax, power, and telephone protectors, if used, all be mounted/grounded together on a bulkhead plate or wall and the equipment chassis also be grounded <u>only</u> to this plate. The plate is then grounded to the ground system. Only by using this single point ground system can the equipment really survive a direct lightning strike.